

Controlling Bosch Alarm Systems Manually From Avigilon

Inside of Avigilon, you can check the status of the alarms as well as set them to arm. In order to check the status, go to Monitor > Intrusion Status

From there, you will be on the Panel page, which shows the status of the alarm panel.

avigilon Access Control Manager

Monitor Identities Reports Physical Access Roles

Events Search Alarms Verification Dashboard Maps **Intrusion Status**

ACM and the Intrusion Panel are synchronizing. This may take several minutes

Panels Areas Points Outputs

Filter:

Panel	Comm	Battery	Power	Tamper	Phone Line
CCISD Alarm	■	■	■	■	■
CCISD CTE Alarm	■	■	■	■	■

■ Online ■ Alarm ■ Trouble

You can also set the alarm to arm. To do that, go under the Area tab, check the area you'd like to have the alarm set for, and pick Delay Arm under the Master dropdown.

- Do not pick instant arm or the Force options. These will not follow the configuration and will cause issues.
- MAKE SURE** to first check if there are any doors that are propped open.

avigilon Access Control Manager

Monitor Identities Reports Physical Access Roles

Events Search Alarms Verification Dashboard Maps **Intrusion Status**

Reload this page to view recent updates

Panels Areas Points Outputs

Master Perimeter Disarm Silence Reset Sensors

Status: Filter:

<input type="checkbox"/>	Status	Area	Panel
<input type="checkbox"/>	■	CTE 2nd Floor	CCISD CTE Alarm
<input type="checkbox"/>	■	CTE 1st Floor	CCISD CTE Alarm
<input type="checkbox"/>	■	CCISD	CCISD Alarm

■ Armed ■ Ready to Arm ■ Not Ready to Arm ■ Partial Arm ■ Trouble ■ Alarm

NOTE: if you are manually adjusting the alarm settings, you will need to disable your door schedule(s.) See [Avigilon Day-to-day Scheduling](#)